

DIGITAL/ALPHA NUMERIC WALL BOX, PHONO REFERENCE CHART
 (Started with Model 461 – 100 Selection Phono)



DIGITAL WALL BOX MODELS 506-507
100 SELECTION OPERATION

WALL BOX
PHONO

100 200	A1 B1	110 210	C1 D1	120 220	E1 F1	130 230	G1 H1
140 240	J1 K1	150 250	A2 B2	160 260	C2 D2	170 270	E2 F2
180 280	G2 H2	190 290	J2 K2	101 201	A3 B3	111 211	C3 D3
121 221	E3 F3	131 231	G3 H3	141 241	J3 K3	151 251	A4 B4
161 261	C4 D4	171 271	E4 F4	181 281	G4 H4	191 291	J4 K4
102 202	A5 B5	112 212	C5 D5	122 222	E5 F5	132 232	G5 H5
TURN KNOB TO VIEW PROGRAM		142 242	J5 K5	152 252	A6 B6	162 262	C6 D6



1ST. VIEWING PROGRAM SECTION

172 272	E6 F6	182 282	G6 H6	192 292	J6 K6	103 203	A7 B7
113 213	C7 D7	123 223	E7 F7	133 233	G7 H7	143 243	J7 K7
153 253	A8 B8	163 263	C8 D8	173 273	E8 F8	183 283	G8 H8
193 293	J8 K8	104 204	A9 B9	114 214	C9 D9	124 224	E9 F9
134 234	G9 H9	144 244	J9 K9	154 254	A0 B0	164 264	C0 D0
174 274	E0 F0	184 284	G0 H0	194 294	J0 K0	100 SELECTIONS FOR YOUR ENTERTAINMENT	
TURN KNOB TO VIEW PROGRAM		100 SELECTIONS FOR YOUR ENTERTAINMENT		100 SELECTIONS FOR YOUR ENTERTAINMENT		TURN KNOB TO VIEW PROGRAM	


2ND. VIEWING PROGRAM SECTION



WALL BOX PULSE TRAIN SEQUENCE

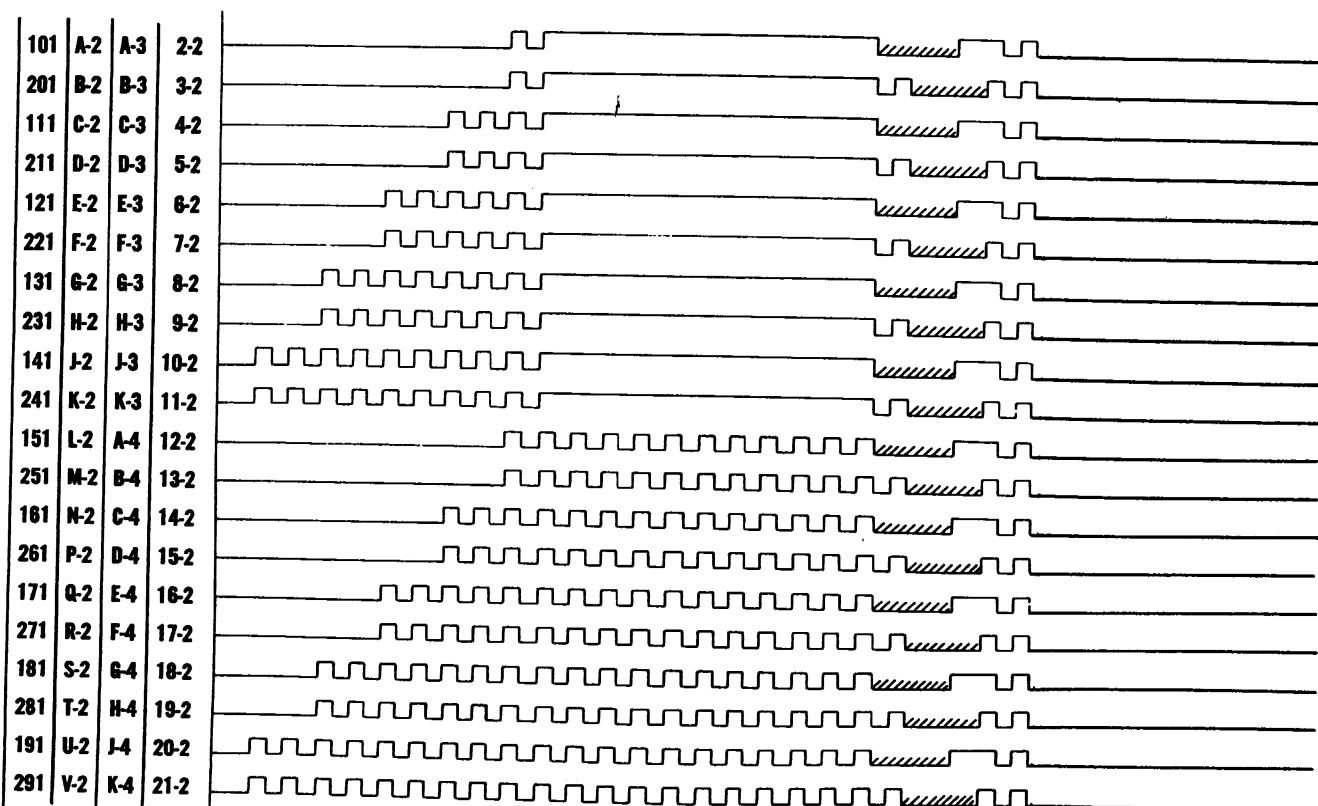
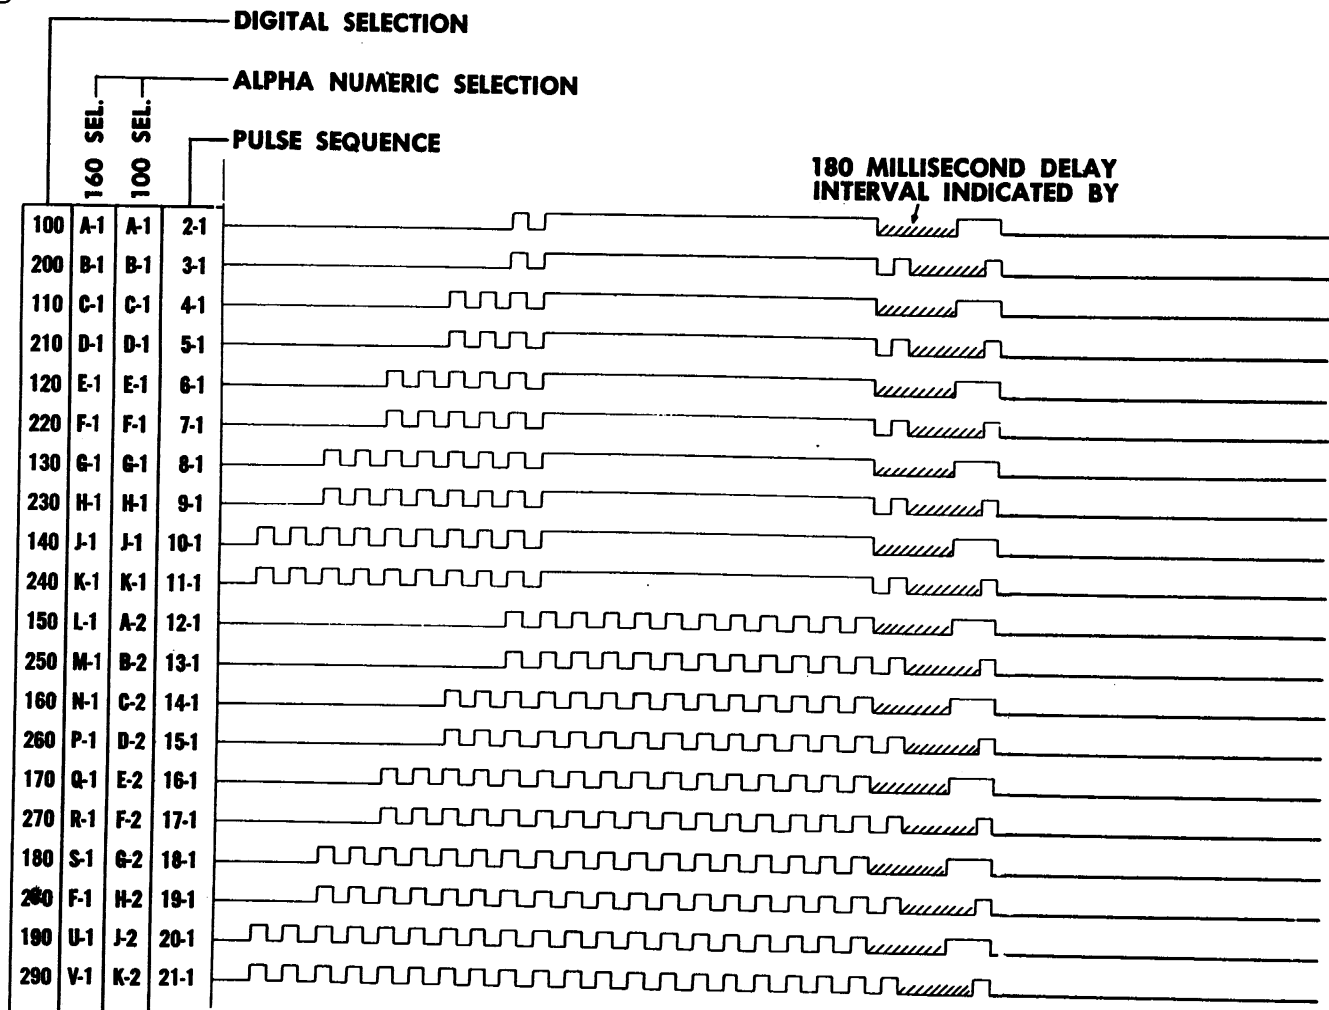


WALL BOX PULSE TRAIN SEQUENCE

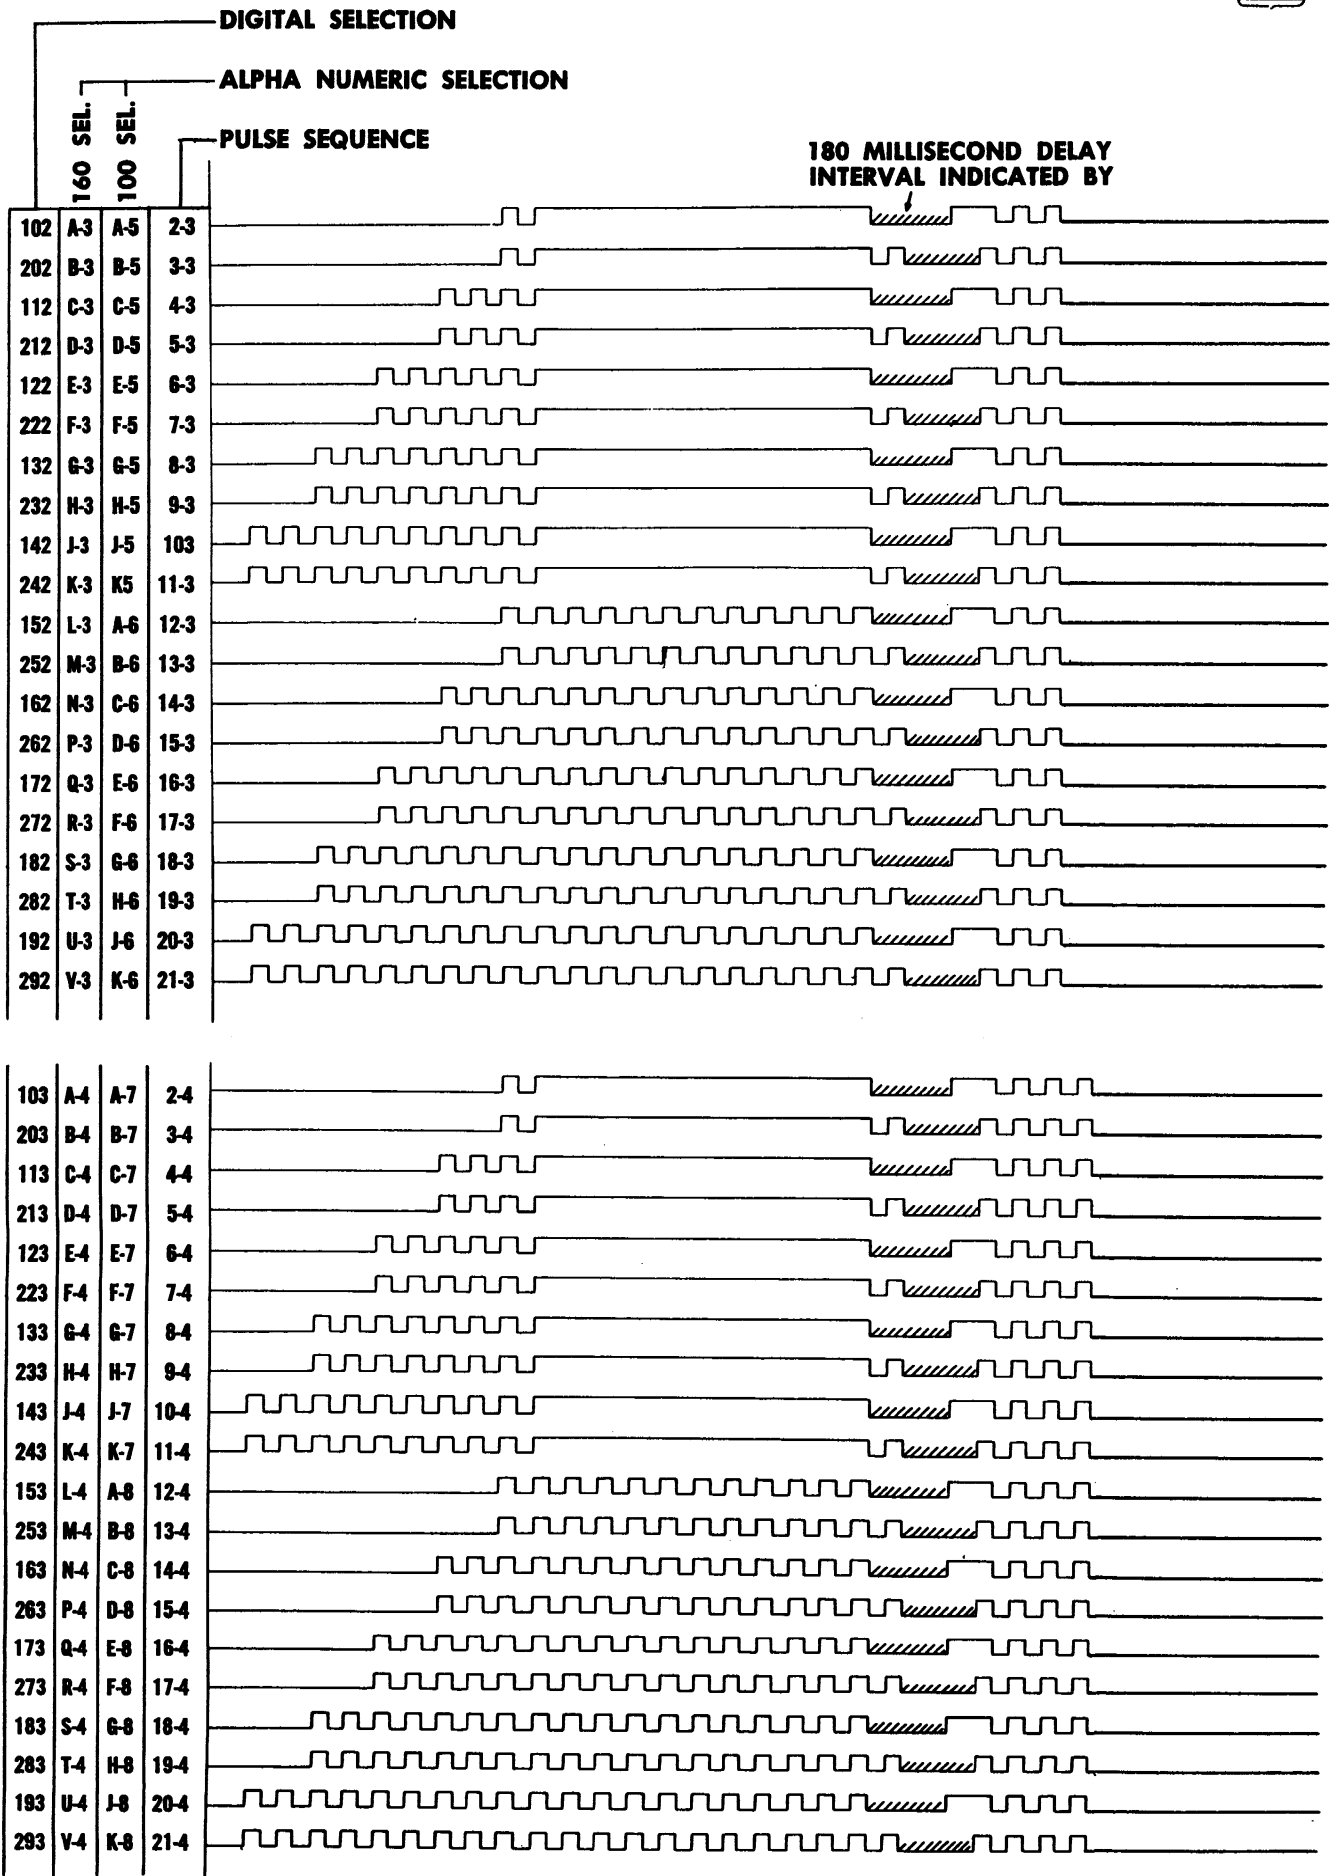



WALL BOX PULSE TRAIN SEQUENCE

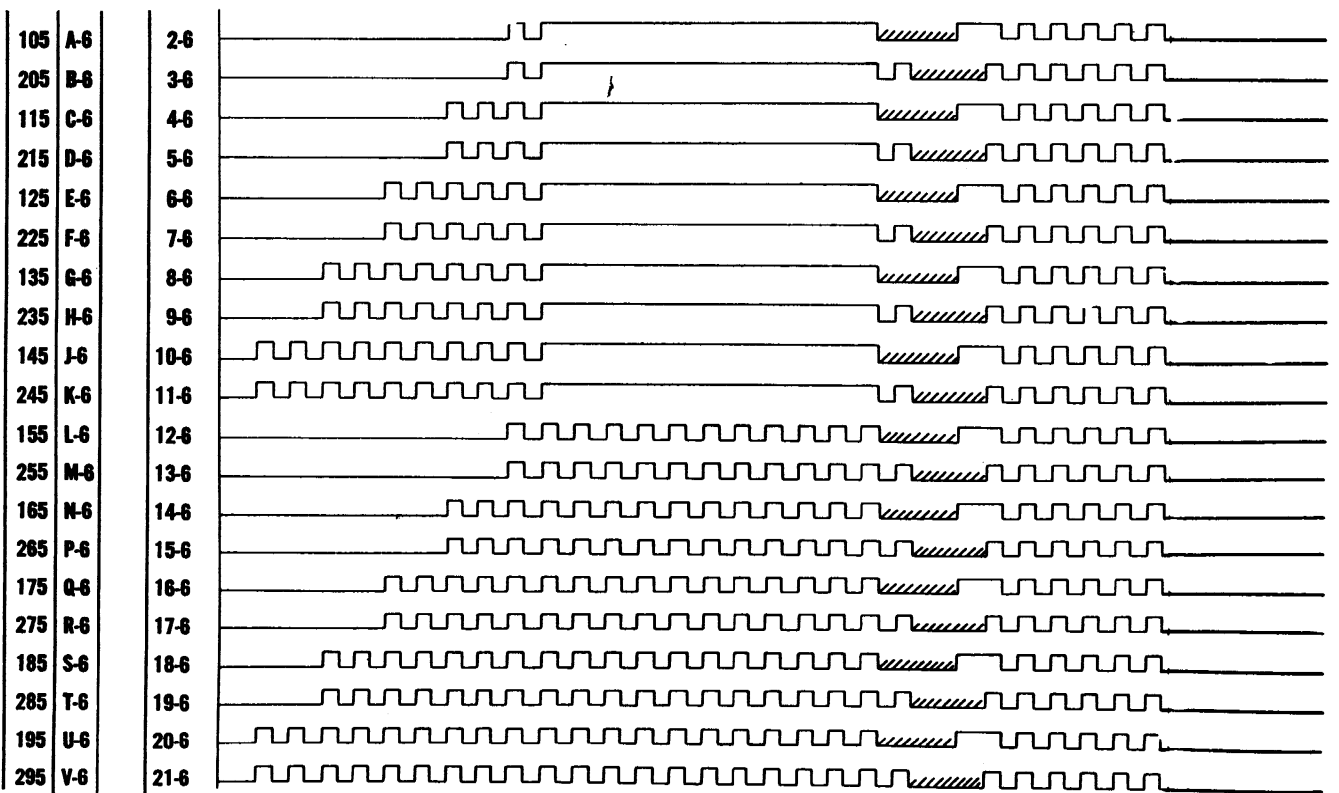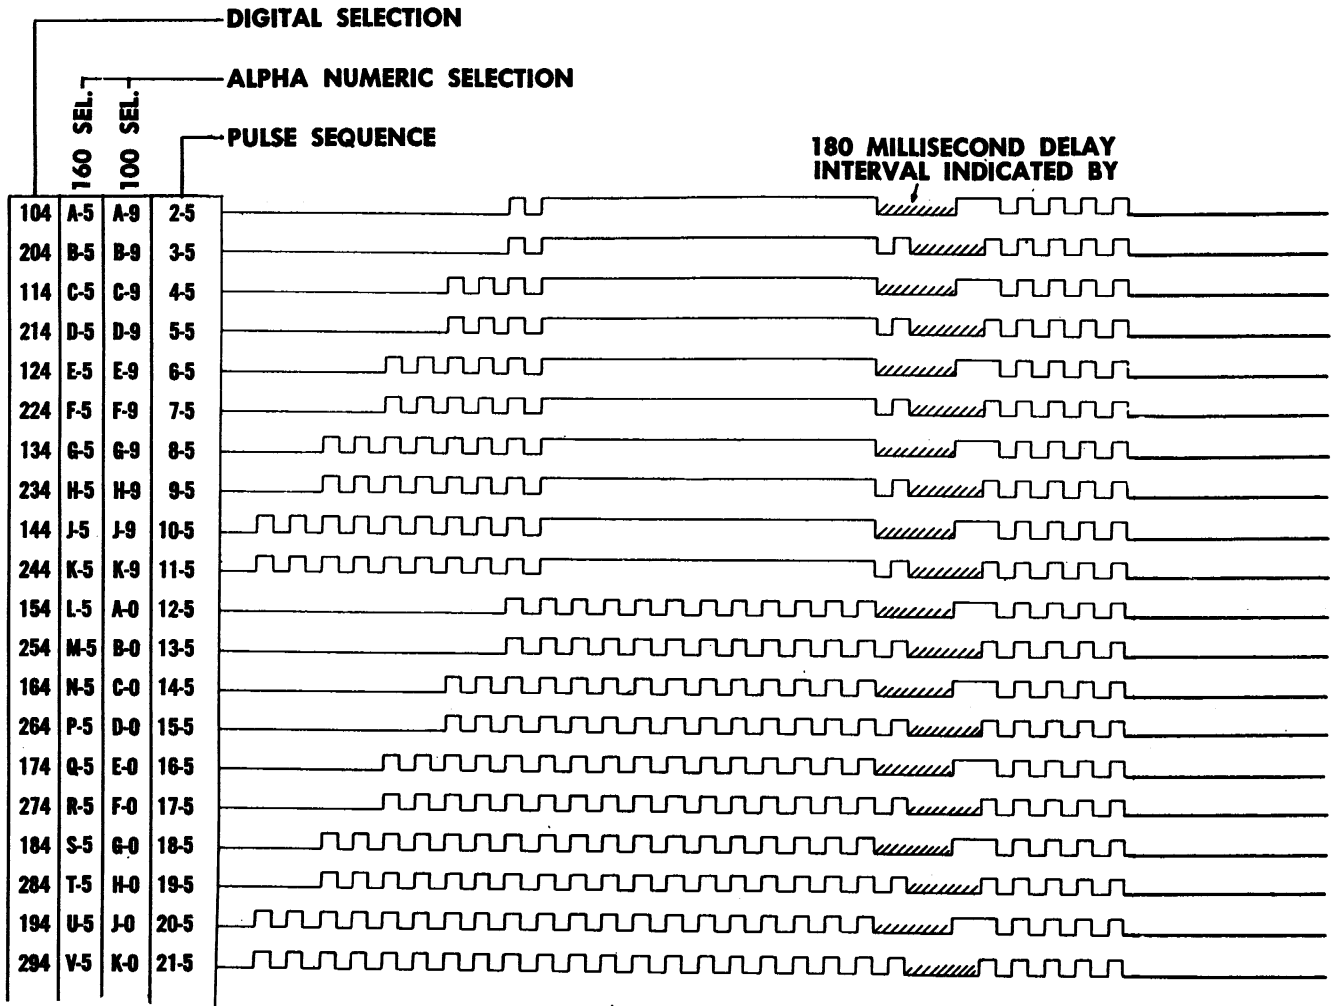



WALL BOX PULSE TRAIN SEQUENCE

