


3.5 IR Remote control RC601 and RC 602

Two infra-red remote controls are available to control the phonograph:

RC601 giving full functionality and control

RC602 with reduced functionality limited to basic functions.

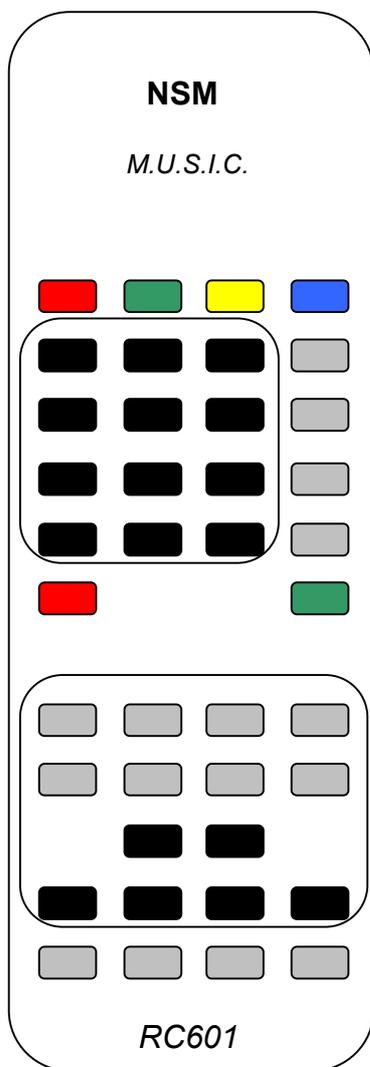

The RC601 offers following possibilities

- ◆ selecting titles
- ◆ setting volume and sound
- ◆ function keys F1 to F4 programmable via service program (i.e. background mode, free credits, reject)

The functions of the keys are:

F1	F2	F3	F4
1ABC	2DEF	3GHI	↑
4JKL	5MNO	6PQR	↓
7STU	8VWX	9YZ	→
C	0Sym	★	Hit
Reject			VIP
C1	C2	C3	C4
C1/2	C3/4	C1-4	Mic
	Volume -	Volume +	
Treble -	Treble +	Bass -	Bass +
Surr	SRS	Mute	Norm

F1 to F4 = user defined function keys (free credit, background, etc.)

1 to 0 = numeric input keys

C = Cancel/Clear input

* = Change display mode during "Service mode"

Hit = Show the Hitparade


VIP = select a VIP title

MIC = select microphone channel

Surr = activate surround sound

SRS = activate SRS sound

C1 to C4 = select audio channels

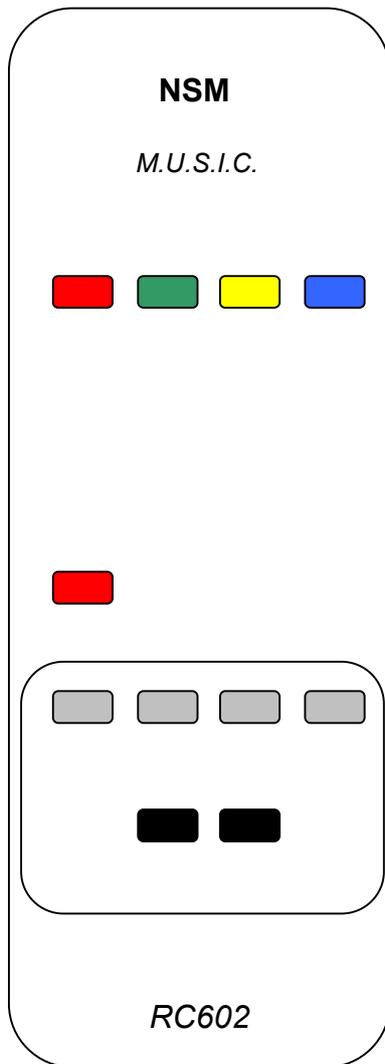

RC602 also offers

- ◆ use of function keys
- ◆ volume control (per channel only)

F1	F2	F3	F4
Reject			
C1	C2	C3	C4
	Volume -	Volume +	

The IR-receiver is connected to the CB “CENTRAL UNIT ESVI” via the 4-pol. connector “IR” in the lower right edge of the board.

3.5.1 How to use the remote control

Following you will find some examples of how to set volume or sound of the phonograph using the IR remote control.

Set volume of all channels (C1-C4):

press [**C1-C4**] and then [**Vol+**] or [**Vol-**]

Set volume of channel (C1) only:

press [**C1**] and then [**Vol+**] or [**Vol-**]

Set volume of channels (C3+C4):

press [**C3-C4**] and then [**Vol+**] or [**Vol-**]

Set treble for channels (C1+C2):

press [**C1-C2**] and then [**Treb+**] or [**Treb-**]